

PO' MAN SAFETY

Please read all safety information before operating this grill.



DANGER!

FAILURE TO HEED THESE DANGER, WARNING AND CAUTION STATEMENTS MAY CAUSE SERIOUS BODILY INJURY OR DEATH, OR A FIRE OR EXPLOSION RESULTING IN DAMAGE TO PROPERTY.

- ⚠ **Can must be placed on a non-combustible surface while in use.**
- ⚠ Before grilling food for the first time, place all assembled parts in can, fill coal box with charcoal and light to burn off any dust, oils etc ... that may accumulate during manufacturing / shipping / transit / storage.
- ⚠ Do not use indoors! This grill is designed for outdoor use only. If used indoors, toxic fumes will accumulate and cause serious bodily injury or death.
- ⚠ Only use this barbecue outdoors in a well-ventilated area. Do not use in a garage, building, breezeway or any other enclosed area.
- ⚠ Do not use this barbecue under any overhead combustible construction.
- ⚠ After use, always place lid on tightly to extinguish the fire and coals.
- ⚠ Regular cleanout of the bottom of can (where fat drippings build up) will prevent flare-ups and will reduce the chance of fire.
- ⚠ Should an accidental fire occur in can, **DO NOT ADD WATER.** Place the lid on tightly to cut off oxygen flow and extinguish the fire.
- ⚠ Improper assembly may be dangerous. Please follow the assembly instructions in this manual. Do not use barbecue unless all parts are in place.
- ⚠ Do not add charcoal starter fluid or charcoal impregnated with charcoal lighter fluid to hot or warm charcoal.
- ⚠ Do not use gasoline or other highly volatile fluids to ignite charcoal. If starter fluid spills or exits starter cup, clean or remove before lighting grill.
- ⚠ You should exercise reasonable care when operating you barbecue. It will be hot during cooking and should never be left unattended during use.
- ⚠ Do not leave infants, children or pets unattended near a hot barbecue.
- ⚠ Do not attempt to move a hot barbecue. Allow the grill to cool before moving.
- ⚠ Do not use this barbecue within five feet of any combustible material. Combustible materials include, but are not limited to wood or treated wood decks, patios and porches.
- ⚠ Do not remove ashes until all charcoal is completely burned out and are fully extinguished and grill is cool.
- ⚠ Always put charcoal in coal bow's deeper side. Do not put charcoal directly in the bottom of the can.
- ⚠ Do not wear clothing with loose flowing sleeves while lighting or using the barbecue.
- ⚠ Do not use barbecue in high winds.
- ⚠ Never dump ashes or coals before they are fully extinguished.
- ⚠ Do not store barbecue until ashes and coals are fully extinguished.
- ⚠ Keep the cooking area clear of flammable vapor and liquids, such as gasoline and other combustible materials.
- ⚠ The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the barbecue.
- ⚠ This barbecue is not intended to be installed in or on recreational vehicles and/or boats.
- ⚠ This barbecue is not intended for and should never be used as a heater.
- ⚠ Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

WARNING

- ⚠ Keep the barbecue on a secure, level surface at all times, clear of combustible material.
- ⚠ Remove the lid from the barbecue while lighting and getting the charcoal started.
- ⚠ Never touch the cooking or charcoal grates, ashes, charcoal or the barbecue to see if they are hot.
- ⚠ Do not use water to control flare-ups or to extinguish charcoal, place lid on can tightly. Also, cover inlet holes with foil if safe and available.
- ⚠ Extinguish coals when finished cooking by placing lid on can tightly.
- ⚠ Barbecue mitts should always be worn while cooking, adjusting lid, adding internal parts and removing internal parts or food.
- ⚠ Use proper barbecue tools, with long, heat-resistant handles.
- ⚠ Do not place a hot lid on carpeting or grass.
- ⚠ Never dump hot coals where they might be stepped on or be a fire hazard.

CAUTION

- ⚠ Using sharp objects to clean the cooking grate or remove ashes will damage the finish.
- ⚠ Using abrasive cleaners on the cooking grates or the barbecue itself will damage the finish.
- ⚠ The barbecue should be thoroughly cleaned on a regular basis.
- ⚠ Use high temperature rated black grill paint to cover damaged surfaces of the can.